
Edge of paved shoulder 380 610 minimum 610 minimum for post "P" Edge of Block required shoulder M16 hex bolt w/ M16 recess nut & M16 button 1 cut washer head bolt w/ (4 req'd. ea. post) M16 recess nut Ground line 10:1 slope or flatter up to 6:1 slope or flatter → face of rail Post

TYPICAL W-BEAM INSTALLATION

GENERAL NOTES

- This sheet shall be used when W-beam guardrail is specified. This sheet shall also be used when a W-beam guardrail system requires the used of standard W-beam guardrail components.
- The details on this sheet are for the assembly of W-beam guardrail components.

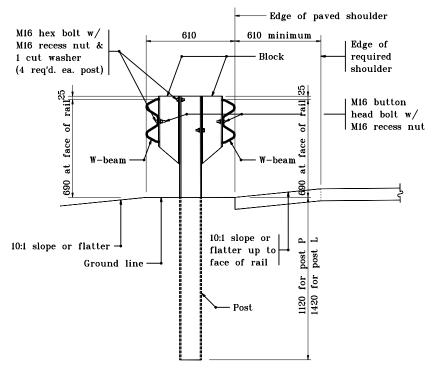

TYPICAL DOUBLE FACED W-BEAM INSTALLATION

